



# ENGINE OIL



## Replacement guideline

		Interval	
1st time	1,000 km	2 months	*whichever comes first
From 2nd time	6,000 km	1 year	

\*This guideline may vary by motorcycle model, condition of use, region, etc. Please refer to the owner's manual or ask an authorized Suzuki dealer for more information.

## Purpose and Function

Many of the components inside the engine make rotational and reciprocating motions. Engine oil lubricates these components to ensure optimum operating performance. The oil cools the engine and also cleans and protects the internal components. Engine oil should be checked daily and replaced periodically.



### **If overused without replacement ...**

- **Abnormal noises may occur**
- **Oil level reduction may occur**
- **The rate of engine component wear increases**
- **Permanent engine damage**

Over time and as mileage increases, engine oil is oxidized by high temperatures and becomes contaminated with soot particles and moisture. If not replaced, degraded engine oil accelerates the wear of internal engine components. Engine parts begin to wear and generate some engine noise and in the worst scenario, the engine will seize up.

\* When you replace engine oil, it is essential to use an oil conforming to the grade and viscosity specified in the Owner's Manual.