



SPARK PLUG




Inspection and replacement guideline

		Interval	
Inspection	6,000 km	1 year	*whichever comes first
Replacement	12,000 km	2 years	

*This guideline may vary by motorcycle model, condition of use, region, etc. Please refer to the owner's manual or ask an authorized Suzuki dealer for more information.

Purpose and Function

The spark plug generates electric sparks for igniting the air-fuel mixture inside the engine cylinder. Clean spark plug prevents abnormal combustion.

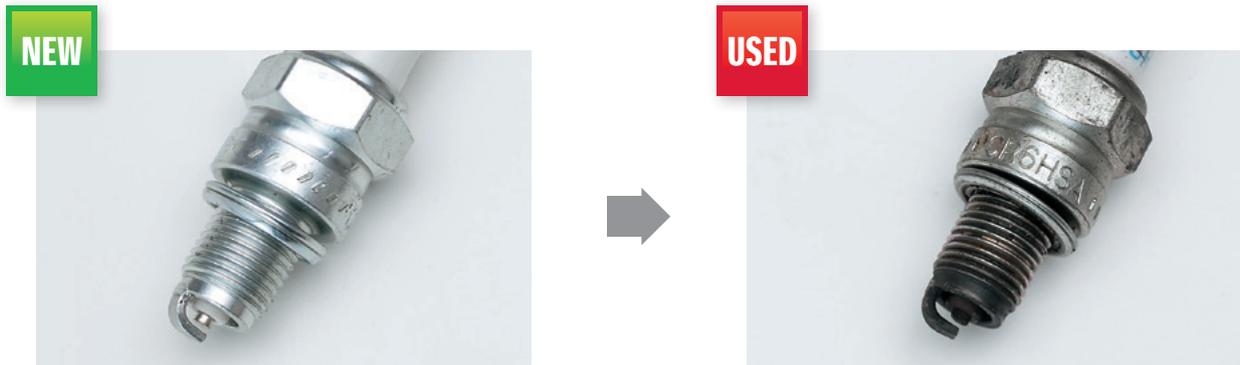

If overused without replacement ...

- Hard to start the engine
- Decrease in engine power
- Decrease in fuel economy

As spark plug electrode degrades or becomes contaminated, the ignition spark becomes weaker, which increases fuel consumption and the possibility of engine malfunction.

* When you replace a spark plug, it is essential to use a new plug of the size and heat range specified in the owner's manual.