

# AUTOMATIC TRANSAXLE FLUID (ATF)




## Replacement guideline

		Interval		
Severe driving condition	30,000 km	2 years		<b>*whichever comes first</b>
Normal driving condition	165,000 km	-		

## Purpose and Function

In order to transfer the revolutions and power generated by the engine to the tires, ATF provides the smooth driving across the whole range from low to high speed.

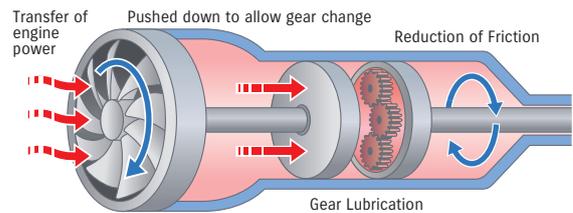

**If overused without replacement ...**

- It may cause shift shock.

# MANUAL TRANSAXLE OIL




## Inspection guideline (Replace if necessary)

		Interval		
30,000 km		2 years		<b>*whichever comes first</b>

## Purpose and Function

The oil lubrication inside the transaxle provides the smooth gear change and improves durability and reliability.

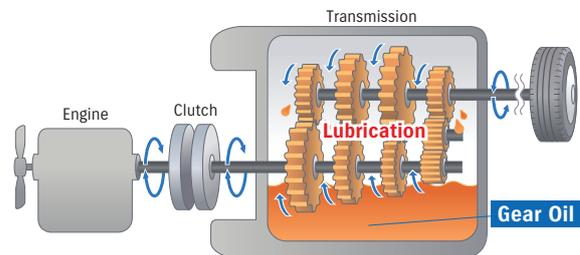

**If overused without replacement ...**

- As this oil deteriorates, gear lubrication becomes insufficient, and may cause gear and bearing damage.